

How to use a Windows 7-based PC

If your host PC runs Windows 7 you have to solve some special configuration and installation problems. A standard Windows 7 PC installation doesn't allow to *ping* the DIL/NetPC DNP/2486 over the Ethernet connection. Windows 7 also doesn't support *Telnet* sessions.

• 1. Step: Before your first *ping* (see also 2.8 *Checking Ethernet-based TCP/IP Communication* of the *DNP/SK29 Embedded Linux Starter Kit First Steps* user manual) from the PC to the DIL/NetPC DNP/9265 please go to the Windows 7 firewall setup (see setup item *Windows Firewall with Advanced Security*). Then change the **Inbound Rules** and **Outbound Rules** for **ICMP** (Enable inbound and outbound ICMP traffic for IPv4).

Eingabeaufforderung	- O X	J
C:\>ping 192.168.0.125		
Ping wird ausgeführt für 192.168.0.125 mit 32 Bytes Daten: Antwort von 192.168.0.125: Bytes=32 Zeit≺1ms TTL=64 Antwort von 192.168.0.125: Bytes=32 Zeit≺1ms TTL=64 Antwort von 192.168.0.125: Bytes=32 Zeit≺1ms TTL=64 Antwort von 192.168.0.125: Bytes=32 Zeit≺1ms TTL=64		
Ping-Statistik für 192.168.0.125: Pakete: Gesendet = 4, Empfangen = 4, Verloren = 0 (0% Verlust), Ca. Zeitangaben in Millisek.: Minimum = Øms, Maximum = Øms, Mittelwert = Øms		
C:∖>		-
✓ III.	Þ	

2. Step: The standard Windows 7 configuration comes without a *Telnet* client program. Please download the free tool *TeraTerm* from http://ttssh2.sourceforge.jp or any other download location. Then install *TeraTerm* on your Windows 7 machine. After that please run *TeraTerm* as a *Telnet* client in VT100 mode (see *TeraTerm Terminal setup – Terminal ID*).

192.168.0.125:23 - Ter		
mblinux log		
assword:	N 1 16 00 01 00 0000 11 00	
ast login:	Mon Jun 16 02:24:30 2008 on ttyS0	
mblinux:~# PID ITY	TIME CMD	
1 ?	00:00:01 init-initta1 00:00:00 ksoftirgd/0	
22	00:00:00 ksoftirgd/0	
3 2	00:00:00 events/0 00:00:00 khelper	
5 ?	00:00 ktbread	
.8 ?	00:00:00 kblockd/0	
11 2	00:00:00 khubd 00:00:00 kseriod	
123458113345678178122239 11366663336178122239 2222414467899	00:00:00 pdflush	
64 ?	00:00:00 pdflush	
65 2	00:00:00 kswapd0	
237 2	00:00:00 aio/0 00:00:00 scsi_eh_0	
238 2	00:00:00 usb-storage	
261 ?	00:00:00 kjournald	
41/ 2	00:00:00 metalog	
461 2	00:00:00 metalog 00:00:00 avahi-autoipd	
462 ?	00:00:00 avahi-autoipd	
472 2	00:00:00 lighttpd	
482 7	00:00:00 inetd 00:00:00 sshd	
499 ?	00:00:00 cron	
510 tty1	00:00:00 getty	
123345811334566781787????????????????????????????????	00:00:00 Iogin 00:00:00 mbserver	
530 ttyS0	00:00:00 mbserver 00:00:00 bash	
543 ?	00:00:00 in.telnetd	
544 pts/0	00:00:00 login	
545 pts/0 549 pts/0	00:00:00 bash 00:00:00 ps	
mblinux:~#		



The standard Windows 7 configuration doesn't allow any *Telnet* traffic. Please go again to the Windows 7 firewall setup (see setup item *Windows Firewall with Advanced Security*). Then create a new outbound rule for the TCP protocol and port 23 (Enable the usage of TCP port 23).


• **3. Step**: For file downloads and uploads between the PC to the DIL/NetPC DNP/2486 please use TFTP. The first one the two DNP/2486 starter kit CD-ROMs offers the TFTP32 server for Windows PC (please see CD-ROM directory *TFTP-Server-Win32*). This server works also with Windows 7.

TFTPD32 by P	^y h. Jounin	Strength Strength		- 0 X
Base Directory	C:_temp			Browse
Server interfaces	192.168.0.130		•	Show Dir
Read request for	ived from 192.168.0.250 on port 46344 file <bild1.png>. Mode octet t 1475 blks, 754561 bytes in 1 s. 0 blk re</bild1.png>	sent		
Current Action	Listening on port 69	i.		
About		Settings		Help

• 4. Step: For editing HTML files on your Windows 7-based PC please use the free *PSPad* editor.

Image: Date: Projekt Bearbeiten Suchen Ansicht Format Werkzeuge Skripte HTML Einstellungen Fenster Hilfe Image: I	PSPad - [C:_temp\hello.html]		x
<pre></pre>	📝 Datei Projekt Bearbeiten Suchen	Ansicht Format Werkzeuge Skripte HTML Einstellungen Fenster Hilfe 🔤 🚽	F ×
<pre> iNeui.tt 2. helo.html</pre>			1
• 10 20 30 40 50 70 80 • • • • • • 80 • • • • • • 80 • • • • • • 80 • • • • • • • • • • 80 • <td>🕂 🤪 🗱 🏛 HTML GAG Gag 🥥 📢 Ġ</td> <td>📕 🎆 📮 💿 64*</td> <td></td>	🕂 🤪 🗱 🏛 HTML GAG Gag 🥥 📢 Ġ	📕 🎆 📮 💿 64*	
<pre> (!DOCTYPE HTML PUBLIC "-//W3C//DTD HTML 4.01 Transitional//EN"> (html></pre>	1., Neu1.txt 2., hello.html		
9:18 (12) [322] = HTML DOS Kodierung: ANSI (Windows)	<pre></pre>	<pre>YPE HTML PUBLIC "-//W3C//DTD HTML 4.01 Transitional//EN"> d> d> a http-equiv="content-type" content="text/html; charset=windows-1250"> a name="generator" content="PSPad editor, www.pspad.com"> le>Hello world title ad> y> ello world! dy> ></pre>	E

• **5. Step**: Windows 7 comes without the *HyperTerminal* terminal emulation program. This wellknown program was a part of older Windows version. It is possible to use *TeraTerm* also as a terminal emulation program over RS232-based links. Please run *TeraTerm* in the serial port mode. Then choose the RS232 COM port instead of *Telnet* and set this port to 115.200/N/8/1.

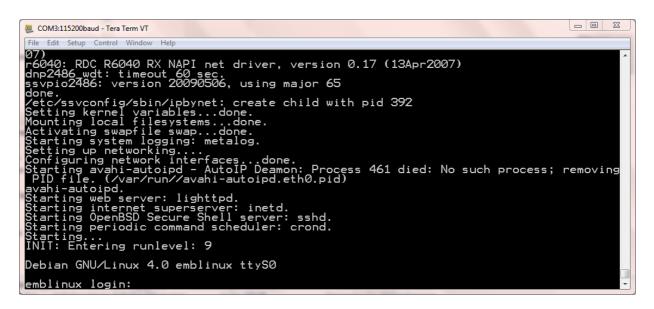

Please note: *HyperTerminal* for the Microsoft Windows 7 O/S is available. Please visit the web site http://www.hilgraeve.com/hyperterminal/ for more information.

That's all.