


## How to reformat the DNP/5280 Flash

---

If the DIL/NetPC DNP/5280 flash chip content corrupted, please reformat the flash. All the old flash content within the Linux JFFS space are destroyed with this process. Please make backups of your files if necessary.

- **1. Step:** Setup a Ethernet-based Telnet session or a RS232 serial link to a terminal emulation program. Enter the DNP/5280 Linux command:

```
eraseall /dev/mtd2
```

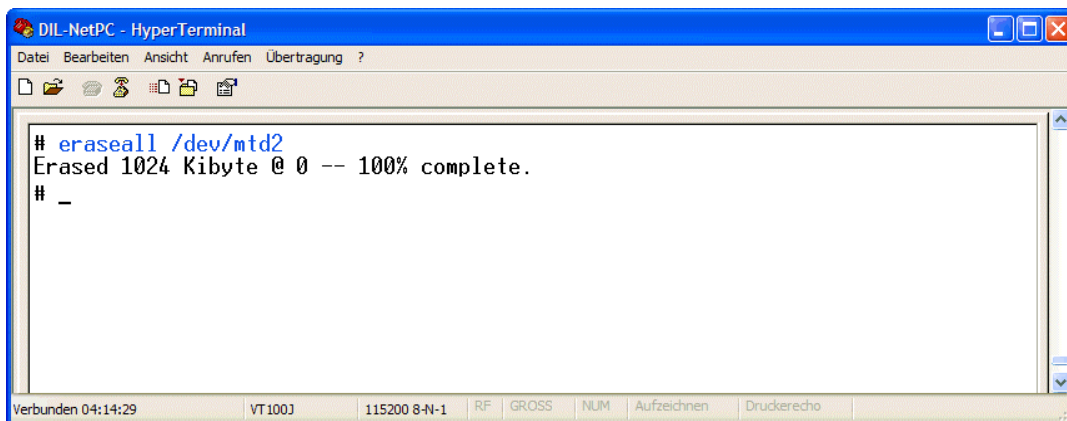

- **2. Step:** Reset the DIL/NetPC DNP/5280. The flash reformat process needs a Linux reboot. Don't access the flash direct after the 1. step.

That is all.